


Model No.:

Air Ratchet Wrench ARW-950T

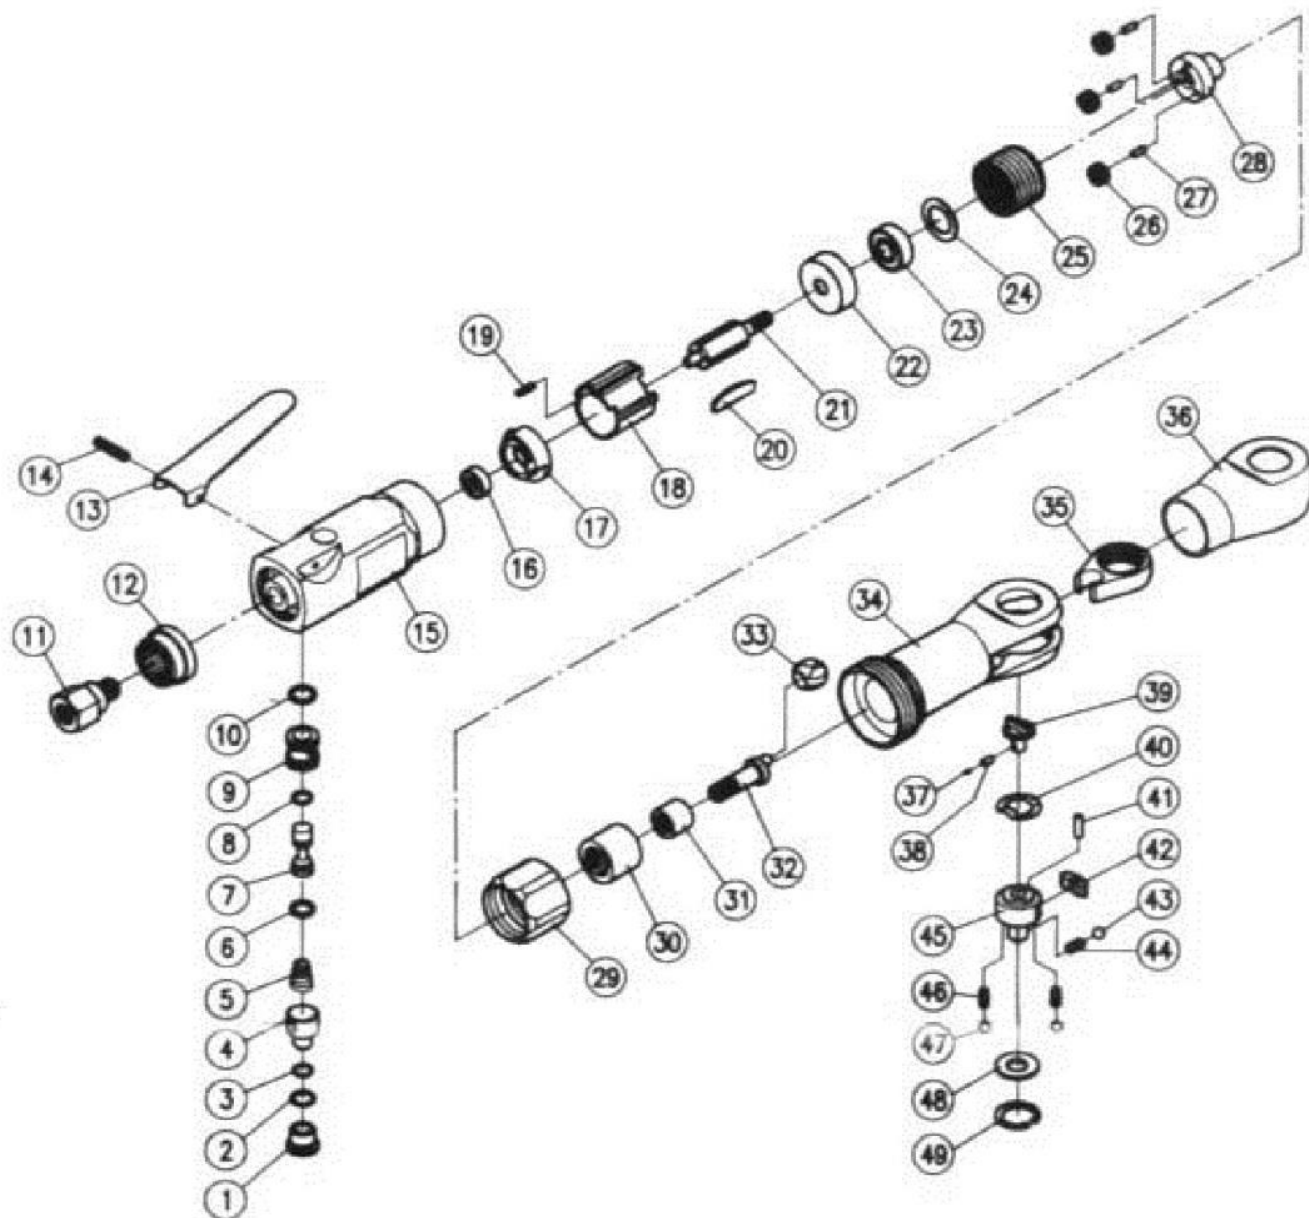

Model No.:

Air Ratchet Wrench ARW-950T



MODEL ARW-950T Air Ratchet Wrench

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	BFR950T000001	VALVE SCREW	26	BFR950T000026	GEAR
2	BFR950T000002	O-RING	27	BFR950T000027	GEAR PIN
3	BFR950T000003	O-RING	28	BFR950T000028	GEAR PLATE
4	BFR950T000004	AIR REGULATOR	29	BFR950T000029	LOCK NUT
5	BFR950T000005	SPRING	30	BFR950T000030	NEEDLE BEARING 12 12-HKO
6	BFR950T000006	O-RING	31	BFR950T000031	NEEDLE BEARING 810-HKO
7	BFR950T000007	THROTTLE VALVE	32	BFR950T000032	CRANK SHAFT
8	BFR950T000008	O-RING	33	BFR950T000033	DRIVE BUSHING
9	BFR950T000009	VALVE BUSHING	34	BFR950T000034	RATCHET HOUSING
10	BFR950T000010	O-RING	35	BFR950T000035	YOKE
11	BFR950T000011	AIR INLET BUSHING	36	BFR950T000036	BOOT
12	BFR950T000012	EXHAUST DEFLECTOR	37	BFR950T000037	LOCK PIN
13	BFR950T000013	THROTTLE LEVER	38	BFR950T000038	SPRING
14	BFR950T000014	LEVER PIN	39	BFR950T000039	REVERSE BUTTON
15	BFR950T000015	MOTOR HOUSING	40	BFR950T000040	WASHER
16	BFR950T000016	BALL BEARING (696ZZ)	41	BFR950T000041	PIN
17	BFR950T000017	REAR END PLATE	42	BFR950T000042	RATCHET PAWL
18	BFR950T000018	CYLINDER	43	BFR950T000043	STEEL BALL
19	BFR950T000019	PIN	44	BFR950T000044	SPRING
20	BFR950T000020	ROTOR BLADE	45	BFR950T000045	ANVIL
21	BFR950T000021	ROTOR	46	BFR950T000046	SPRING
22	BFR950T000022	FRONT END PLATE	47	BFR950T000047	STEEL BALL
23	BFR950T000023	BALL BEARING (608ZZ)	48	BFR950T000048	WASHER
24	BFR950T000024	WASHER	49	BFR950T000049	RETAINING RING
25	BFR950T000025	RING GEAR			