


Model No.:

Air Ratchet Wrench ARW-635T

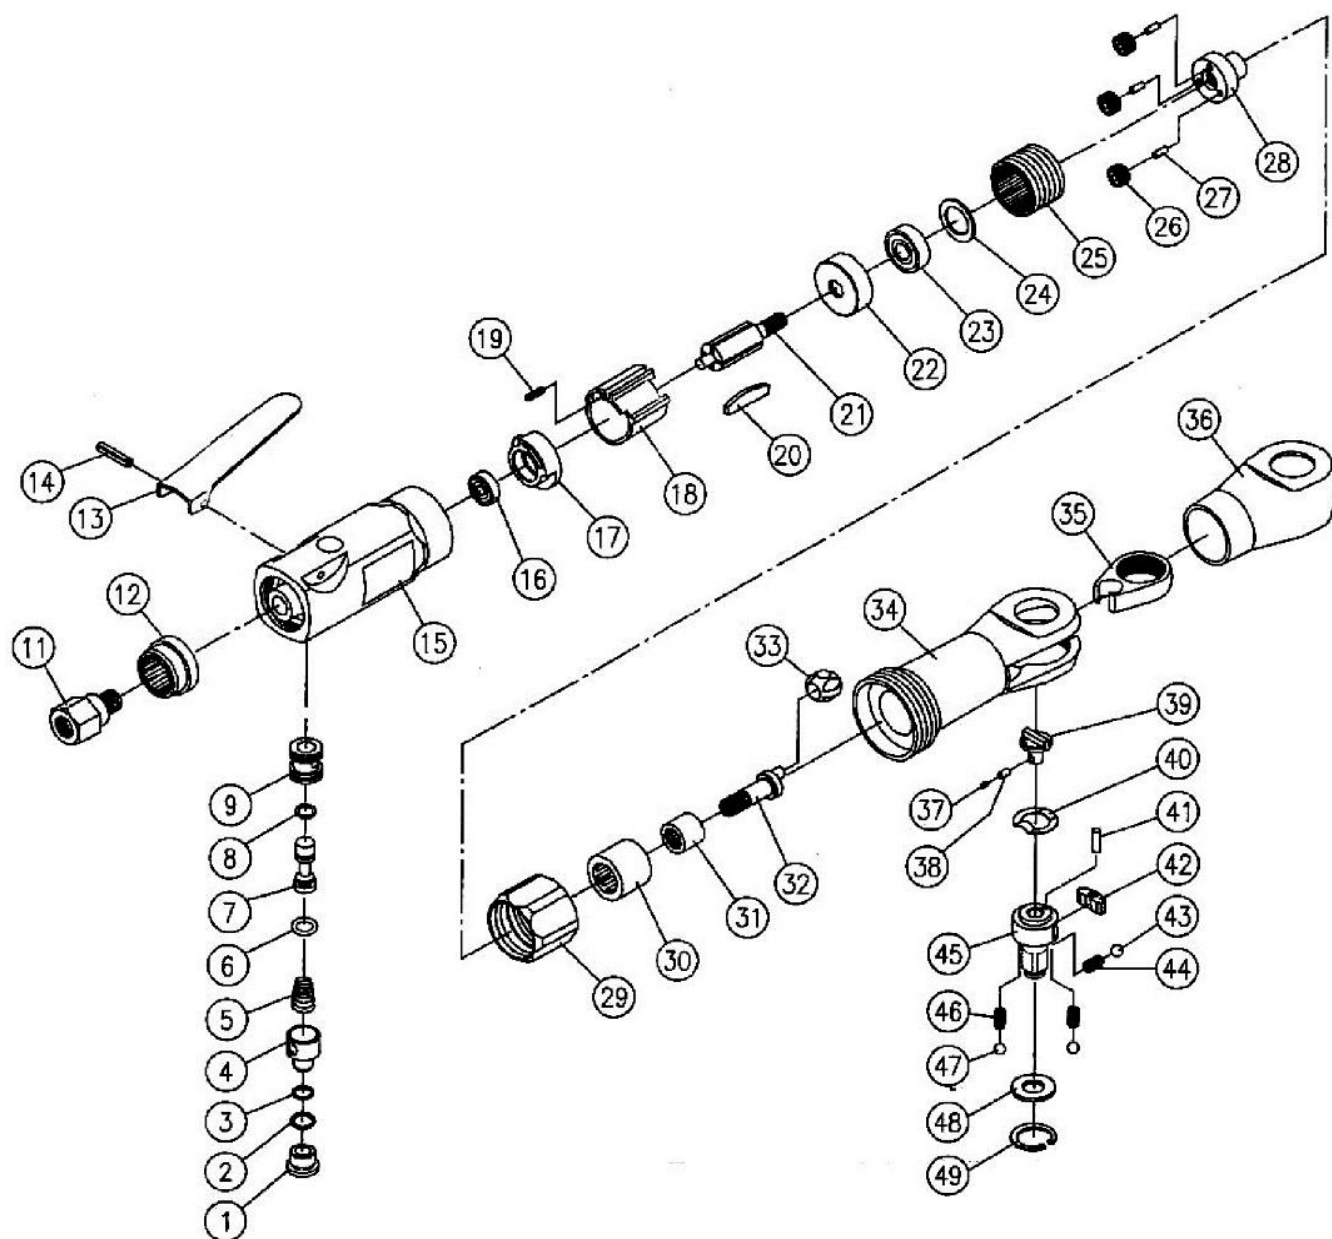

Model No.:

Air Ratchet Wrench ARW-635T



MODEL ARW-635T Air Ratchet Wrench

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	BFR635T000001	VALVE SCREW	26	BFR635T000026	GEAR
2	BFR635T000002	O-RING	27	BFR635T000027	GEAR PIN
3	BFR635T000003	O-RING	28	BFR635T000028	GEAR PLATE
4	BFR635T000004	AIR REGULATOR	29	BFR635T000029	LOCK NUT
5	BFR635T000005	SPRING	30	BFR635T000030	NEEDLE BEARING 1212-HKO
6	BFR635T000006	O-RING	31	BFR635T000031	NEEDLE BEARING 810-HKO
7	BFR635T000007	THROTTLE VALVE	32	BFR635T000032	CRANK SHAFT
8	BFR635T000008	O-RING	33	BFR635T000033	DRIVE BUSHING
9	BFR635T000009	VALVE BUSHING	34	BFR635T000034	RATCHET HOUSING
11	BFR635T000011	AIR INLET BUSHING	35	BFR635T000035	YOKE
12	BFR635T000012	EXHAUST DEFLECTOR	36	BFR635T000036	BOOT
13	BFR635T000013	THROTTLE LEVER	37	BFR635T000037	LOCK PIN
14	BFR635T000014	LEVER PIN	38	BFR635T000038	SPRING
15	BFR635T000015	MOTOR HOUSING	39	BFR635T000039	REVERSE BUTTON
16	BFR635T000016	BALL BEARING 696ZZ	40	BFR635T000040	WASHER
17	BFR635T000017	REAR END PLATE	41	BFR635T000041	PIN
18	BFR635T000018	CYLINDER	42	BFR635T000042	RATCHET PAWL
19	BFR635T000019	PIN	43	BFR635T000043	STEEL BALL
20	BFR635T000020	ROTOR BLADE	44	BFR635T000044	SPRING
21	BFR635T000021	ROTOR	45	BFR635T000045	ANVIL
22	BFR635T000022	FRONT END PLATE	46	BFR635T000046	SPRING
23	BFR635T000023	BALL BEARING (608ZZ)	47	BFR635T000047	STEEL BALL
24	BFR635T000024	WASHER	48	BFR635T000048	WASHER
25	BFR635T000025	RING GEAR	49	BFR635T000049	RETAINING RING