


Model No.:

Air Screw Driver 3/8" CT-1611

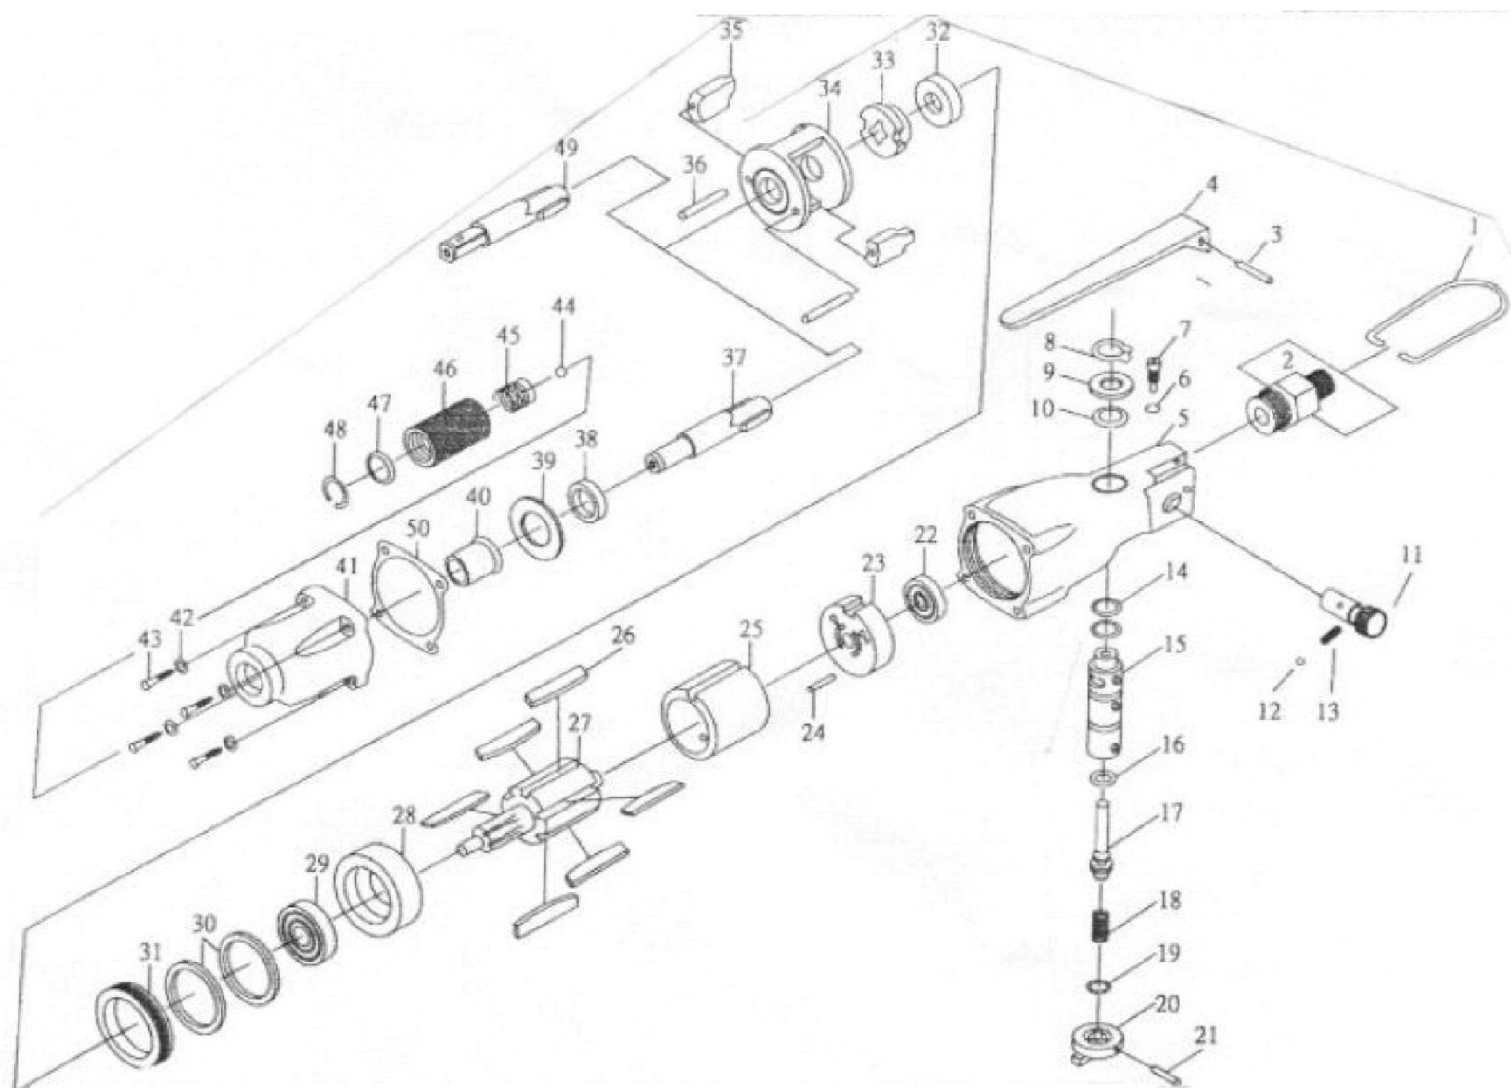

Model No.:

Air Screw Driver 3/8" CT-1611



MODEL CT-1611 3/8" Air Screw Driver

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	110100000L	HOOK	26	0626000000	BLADES
2	1102000000	INLET BUSHING	27	0627000000	ROTOR
3	0425000000	PIN	28	0628000000	FRONT PLATE
4	110500000N	SWITCH LEVER	29	0629000000	BEARING
5	060500000P	HOUSING	30	0630000000	GASKET
6	P3	O-RING	31	0631000000	NUT
7	0607000000	SCREW	32	0632000000	WASHER
8	0426000000	"C" PETAINING RING	33	0633000000	CAM
9	0609000000	WASHER	34	0634000000	HAMMER HOUSING
10	P6	O-RING	35	0635000000	HAMMER
11	0611000000	REGULATOR	36	0636000000	PIN
12	0420000000	STEEL BALL	37	063700000HO	ANVIL
13	0423000000	SPRING	38	0638000000	COLLAR
14	P8	O-RING	39	0639000000	WASHER
15	0615000000	THROTTLE BUSHING	40	0640000000	SLEEVE
16	P3	O-RING	41	0641000000	HOUSING CAP
17	061700000H	THROTTLE PIN	42	0642000000	WASHER
18	1119000000	SPRING	43	0643000000	SCREW
19	P5	O-RING	44	0644000000	STEEL BALL
20	062000000N	REVERSE VALVE	45	0645000000	SPRING
21	0447000000	PIN	46	0646000000	SPRING SEAT
22	1123000000	BEARING	47	0647000000	WASHER
23	0623000000	REAR PLATE	48	0648000000	CIRCLET
24	0624000000	PIN	49	064900000BO	ANVIL FOR IMPACT WRENCH
25	0625000000	CYLINDER	50	0650000000	GASKET