


Model No.:

Air Screw Driver ASD-5104LC

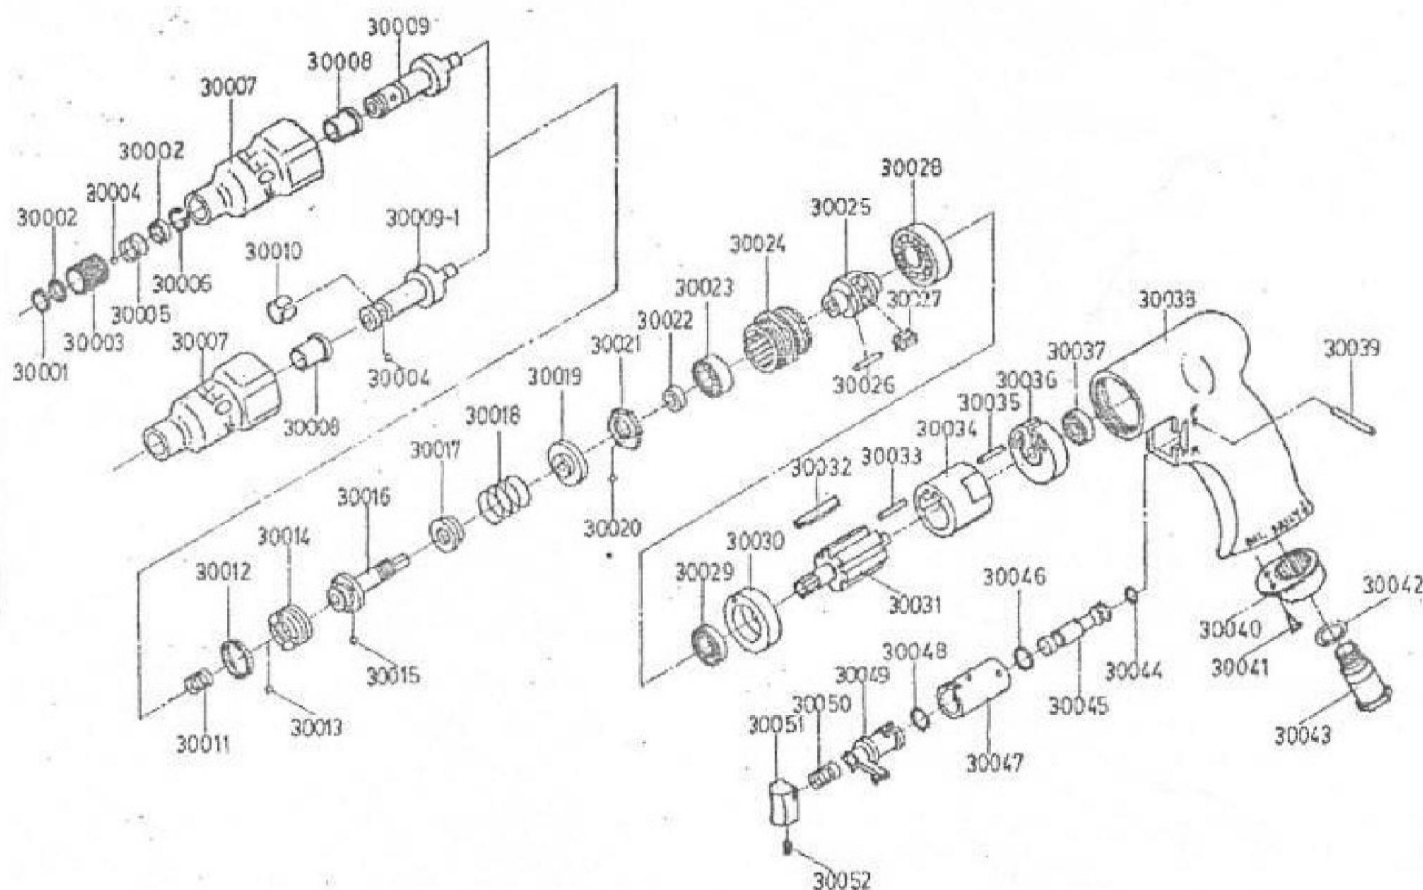

Model No.:

Air Screw Driver ASD-5104LC



MODEL ASD-5104LC Air Screw Driver

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	30001	RETAINER RING	27	30027	PLANET WHEEL
2	30002	RETAINER WASHER	28	30028	BALL BEARING
3	30003	BALL RETAINER	29	30029	BALL BEARING
4	30004	STEEL BALL (1/8")	30	30030	FRONT PLATE
5	30005	SPRING	31	30031	ROTOR
6	30006	BALL RETAINER SPRING	32	30032	ROTOR BLADE
7	30007	CLUTCH CASE NUT	33	30033	PIN
8	30008	BUSHING	34	30034	CYLINDER
9	30009	ANVIL	35	30035	PIN
9a	30009-1	ANVIL	36	30036	REAR END PLATE
10	30010	STEEL BALL COLLAR	37	30037	BALL BEARING
11	30011	CENTER SPRING	38	30038	HOUSING
12	30012	DOG RETAINER	39	30039	PIN
13	30013	STEEL BALL (A)	40	30040	EXHAUST DIFFUSER
14	30014	DOG	41	30041	SCREW
15	30015	STEEL BALL	42	30042	O-RING
16	30016	CLUTCH SPRING	43	30043	AIR INLET
17	30017	CLUTCH SPRING SEAT	44	30044	O-RING
18	30018	CLUTCH SPRING	45	30045	VALVE STEM
19	30019	ADJUST NUT SEAT	46	30046	O-RING
20	30020	STEEL BALL (A)	47	30047	REVERSE BUSHING
21	30021	ADJUST NUT	48	30048	O-RING
22	30022	COLLAR	49	30049	REVERSE LEVER
23	30023	BALL BEARING	50	30050	VALVE SPRING
24	30024	INTERNAL GEAR	51	30051	TRIGGER
25	30025	PLANET CAGE	52	30052	SET SCREW
26	30026	PLANET PIN			