


Model No.:

Air Screw Driver ASD-5104LCG

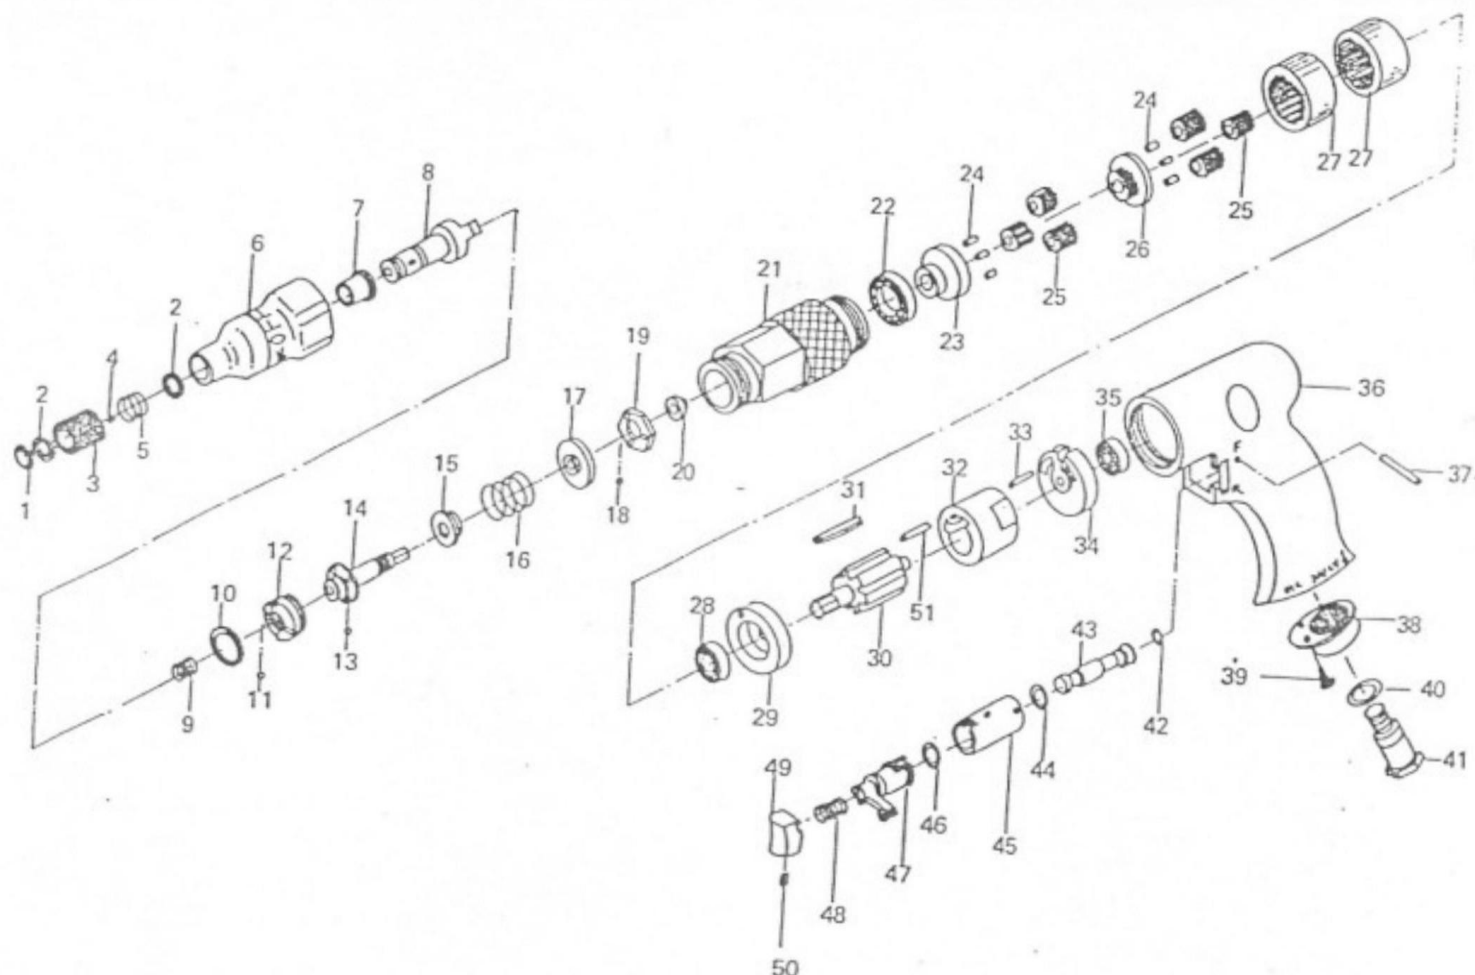

Model No.:

Air Screw Driver ASD-5104LCG



MODEL ASD-5104LCG Air Screw Driver

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	6201	RETAINER RING	27	10531	PLANET CASE
2	6202	RETAINER WASHER	28	30114	BALL BEARING (608)
3	6203	BALL RETAINER	29	30115	FRONT PLATE
4	6204	STEEL BALL (1/8")	30	30116	ROTOR
5	6205	BALL RETAINER SPRING	31	30117	ROTOR BLADE
6	6206	CLUTCH CASE NUT	32	30118	CYLINDER
7	6207	BUSHING	33	30119	PIN
8	6208	ANVIL	34	30120	REAR END PLATE
9	6209	CLUTCH SPRING	35	30121	BALL BEARING (626)
10	6210	CLUTCH SPRING SEAT	36	30122	HOUSING
11	6211	STEEL BALL (A)	37	30123	PIN
12	6212	DOG	38	30124	EXHAUST DIFFUSER
13	6213	STEEL BALL	39	30125	SCREW
14	6214-B	CLUTCH SPINDLE	40	30126	O-RING
15	6215-B	CLUTCH SPRING SEAT	41	30127	AIR INLET
16	6216	CLUTCH SPRING	42	30128	O-RING
17	6217-B	ADJUST NUT SEAT	43	30129	VALVE STEM
18	6218	STEEL BALL	44	30130	O-RING
19	6219-B	ADJUST	45	30131	REVERSE BUSHING
20	6220-B	CLUTCH SPRING SET	46	30132	O-RING
21	6221-A	INTERNAL GEAR HOUSING	47	30133	REVERSE LEVER
22	10526	BALL BEARING (6201)	48	30134	VALVE SPRING
23	10527	PLANET CAGE	49	30135	TRIGGER
24	10528	GERA PIN	50	30136	SET SCREW
25	10529	GEAR	51	30137	PIN
26	10530	PLANET CAGE OF GEAR			