


Adjustable Clutch Air Screw Driver ASD-306SL2



Model No.:

Adjustable Clutch Air Screw Driver ASD-306SL2

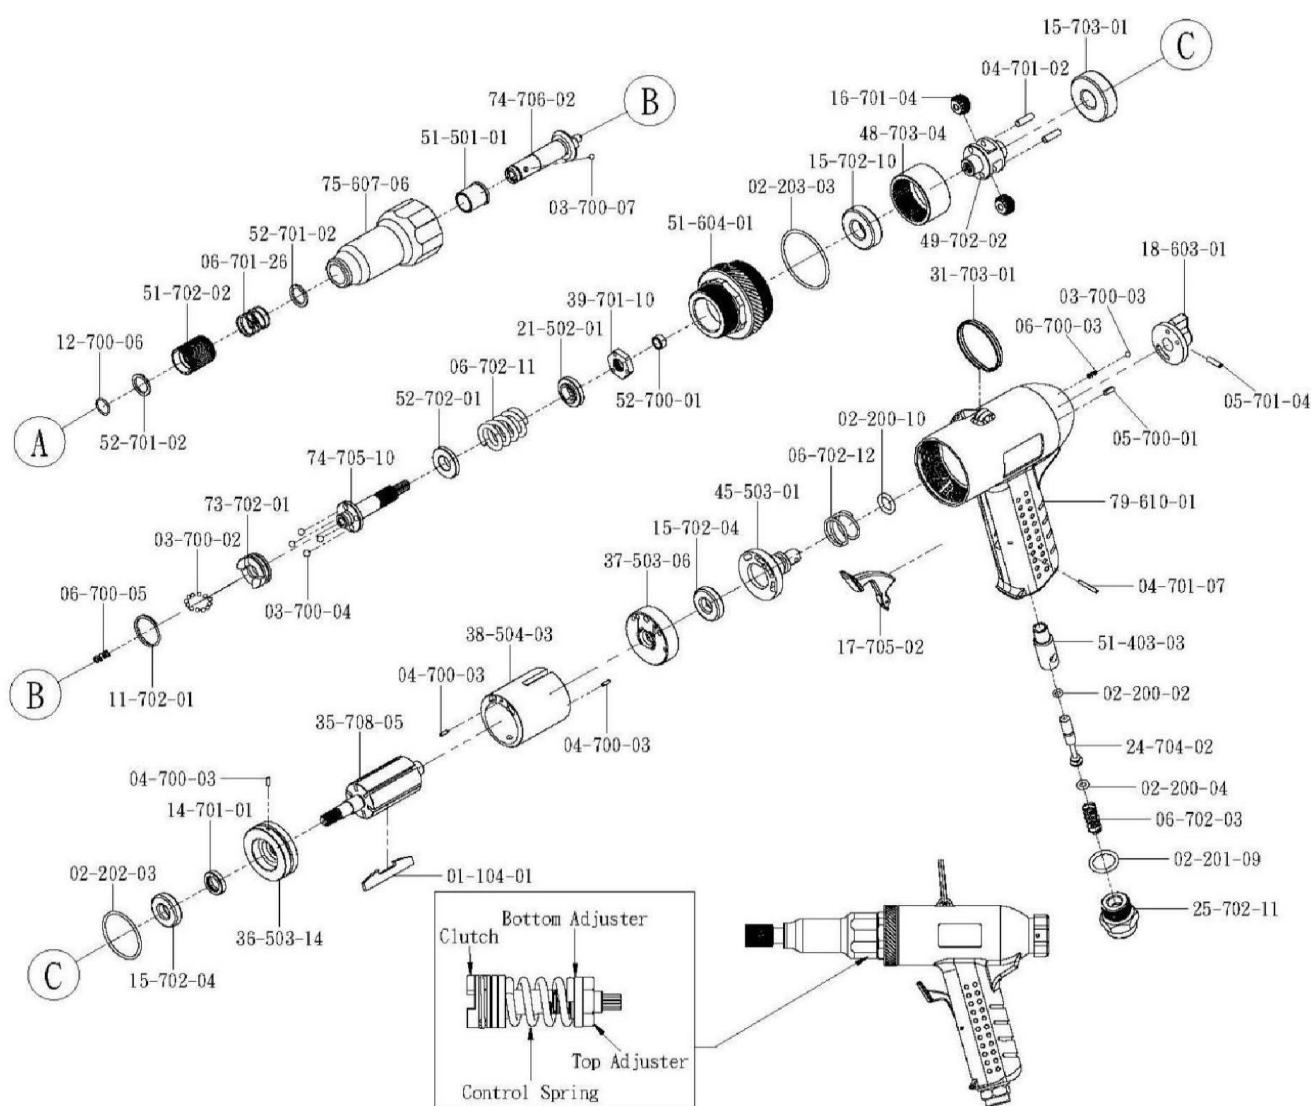

MODEL ASD-306SL2 Adjustalbe Clutch Air Screw Driver

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	01-104-01	ROTOR BALDE	29	16-701-04	GEAR
2	02-200-02	O-RING (P3.5×1.5)	30	17-705-02	SWITCH LEVER
3	02-200-04	O-RING (P4×1.9)	31	18-603-01	REVERSE VALVE
4	02-200-10	O-RING (P9.2×2.5)	32	21-502-01	WASHER
5	02-201-09	O-RING (P14×2.4)	33	24-704-02	VALVE ROD
6	02-202-03	O-RING (P29.87×1.8)	34	25-702-11	AIR INLET (PT)
7	02-203-03	O-RING (P37.82×1.78)	35	31-703-01	HOOK
8	03-700-02	STEEL BALL (Ø2.5mm)	36	35-708-05	ROTOR
9	03-700-03	IRON BALL (Ø3.175mm)	37	36-503-14	FRONT PLATE
10	03-700-04	STEEL BALL (Ø4mm)	38	37-503-06	REAR PLATE
11	03-700-07	STEEL BALL (Ø3.175mm)	39	38-504-03	CYLINDER
12	04-700-03	PIN (Ø2×6)	40	39-701-10	BOLT
13	04-701-02	PIN (Ø4×13)	41	45-503-01	ADJUSTER
14	04-701-07	PIN (Ø2×16)	42	48-703-04	GEAR RING
15	05-700-01	PIN (Ø3×8)	43	49-702-02	GEAR SEAT
16	05-701-04	PIN (Ø3×12)	44	51-403-03	BUSHING
17	06-700-03	SPRING	45	51-501-01	BUSHING
18	06-700-05	SPRING	46	51-604-01	BUSHING
19	06-701-26	SPRING	47	51-702-02	BUSHING
20	06-702-03	SPRING	48	52-700-01	WASHER
21	06-702-11	SPRING	49	52-701-02	WASHER
22	06-702-12	SPRING	50	52-702-01	WASHER
23	11-702-01	RETAINING RING	51	73-702-01	CLUTCH
24	12-700-06	RETAINING RING	52	74-705-10	DRIVING ROD
25	14-701-01	OIL SEAL	53	74-706-02	ANVIL
26	15-702-04	BALL BEARING (R6)	54	75-607-06	FRONT CAP
27	15-702-10	BALL BEARING (6002)	55	79-610-01	HANDLE
28	15-703-01	BALL BEARING (6201)			