


Model No.:

Air Screw Driver ASD-800A

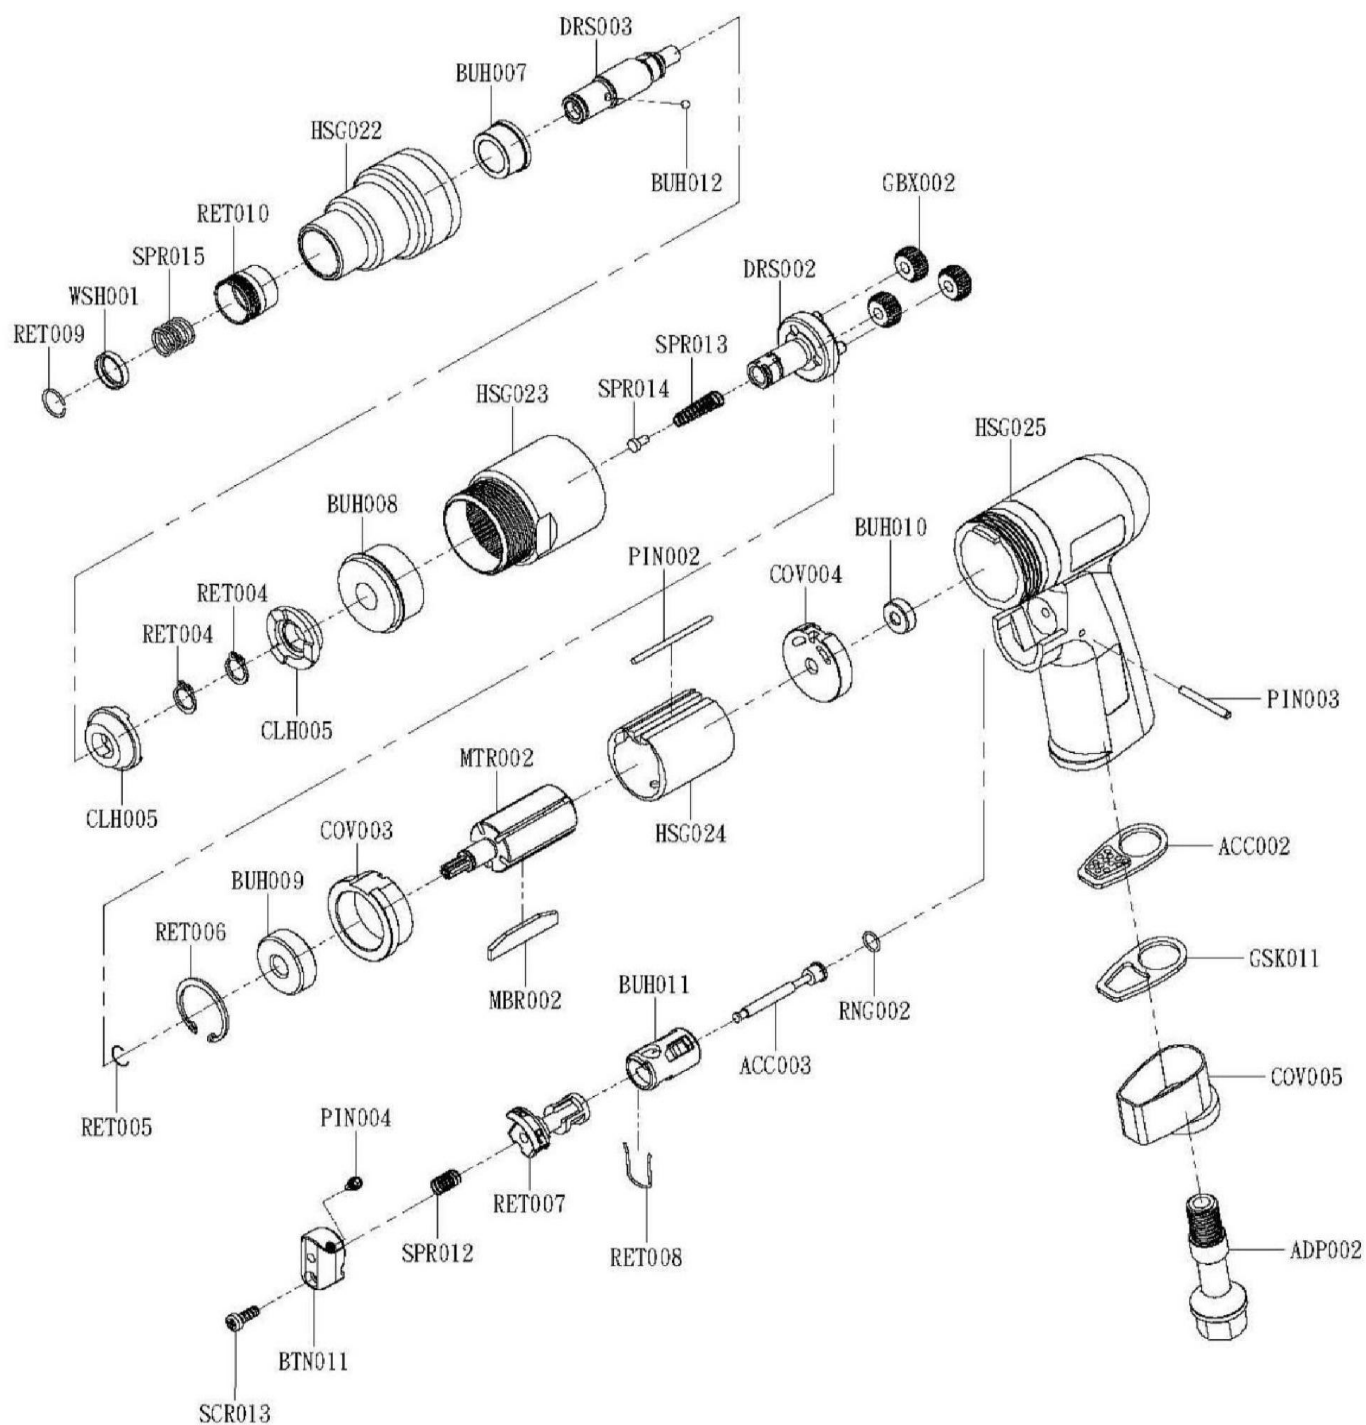

Model No.:

Air Screw Driver ASD-800A



MODEL ASD-800A Air Screw Driver

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	SPR012	TRIGGER SPRING	22	RET004	RETAINING RING
2	BTN011	TRIGGER	23	HSG024	CYLINDER
3	SCR013	RETAINING SCREW	24	PIN002	PIN
4	ACC002	DIFFUSER	25	GBX002	PLANET GEAR
5	PIN004	TRIGGER SPRING	26	MTR002	ROTOR
6	RET007	VALVE BUSHING	27	COV004	REAR PLATE
7	BUH011	SPRING CLIP	28	HSG025	MOTOR HOUSING
8	RET008	WASHER	29	CLH005	CLUTCH
9	RNG002	VALVE	30	BUH010	BALL BEARING
10	ACC003	RETAINING RING	31	DRS002	WORK SPINDLE
11	RET00	SLEEVE BEARING	32	HSG023	GEAR HOUSING
12	NUH007	WASHER	33	RET005	RETAINING RING
13	WSH001	BALL RETAINER	34	BUH008	BALL BEARING
14	RET010	CLUTCH SPINDLE	35	SPR013	SPRING
15	SPR015	CLUTCH	36	SPR014	SPRING GUIDE
16	COV005	BALL BEARING	37	COV003	FRONT PLATE
17	GSK011	WORK SPINDLE	38	MBR002	ROTOR BLADE
18	ADP002	GEAR HOUSING	39	DRS003	WORK SPINDLE
19	HSG022	RETAINING RING	40	RET006	RETAINING RING
20	BUH012	STEEL BALL	41	BUH009	BALL BEARING
21	PIN003	TRIGGER PIN			