


Model No.:

Air Screw Driver ASD-800S

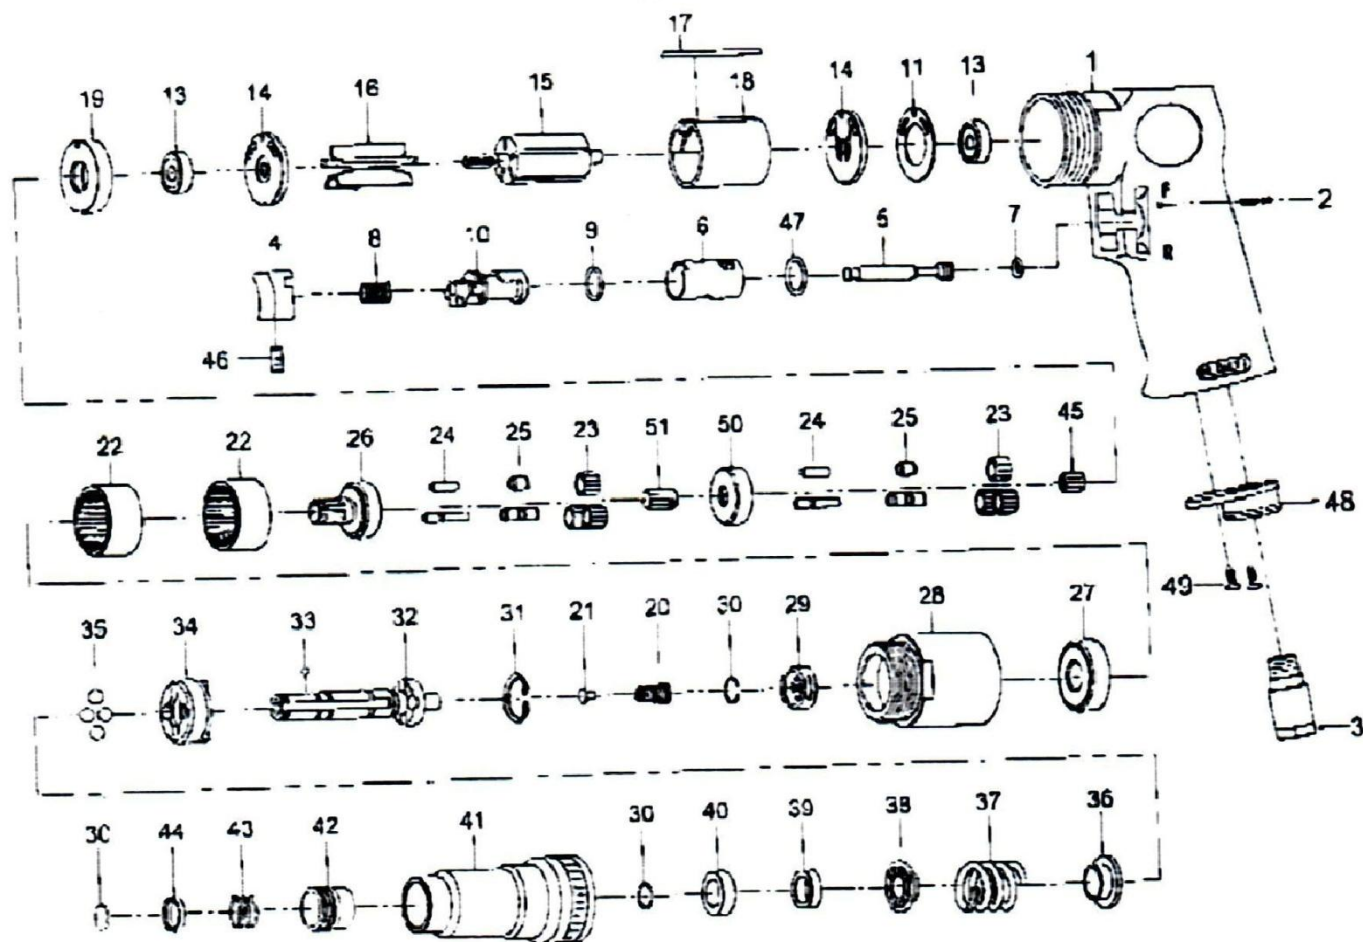

Model No.:

Air Screw Driver ASD-800S



MODEL ASD-800S Air Screw Driver

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	B800S00080201	MOTOR HOUSING	27	B800S00080227	BALL BEARING (6231Z)
2	B800S00080202	SPRING PIN (Ø2.5×24L)	28	B800S00080328	CLAMP NUT
3	B800S00070103	AIR INLET	29	B800S00080229	DRIVE CLUTCH (4×13.8L)
4	B800S00070104	TRIGGER	30	B800S00080230	RETAINING RING
5	B800S00080205	VALVE STEM	31	B800S00080231	SNAP RING (RTW-21)
6	B800S00080206	REVERSE BUSHING	32	B800S00080232	CAM SPINDLE
7	B800S00070107	O-RING (Ø4.8×Ø1.9)	33	B800S00040145	STEEL BALL (1/8")
8	B800S00070108	VALVE SPRING	34	B800S00080234	CLUTCH
9	B800S00080209	O-RING (Ø12×Ø1.6)	35	B800S00080235	STEEL BALL (1/4")
10	B800S00080210	REVERSE LEVER	36	B800S00080236	THRUST WASHER
11	B800S00080211	MOTOR GASKET	37	B800S00080237	SPRING
13	B800S00030113	BALL BEARING (626ZZ)	38	B800S00080238	WASHER
14	B800S00080214	END PLATE	39	B800S00080239	ADJUST NUT
15	B800S00080215	ROTOR	40	B800S00080240	SPACER
16	B800S00080216	ROTOR BLADES	41	B800S00080241	CLUTCH HOUSING
17	B800S00080213	SPRING PIN (Ø2.5×55L)	42	B800S00080242	BALL RETAINER
18	B800S08021822	CYLINDER	43	B800S00080243	SPRING
19	B800S00080219	SPACER	44	B800S00080244	WASHER
20	B800S00080220	SPRING	45	B800S00070420	PINION GEAR
21	B800S00080221	SPRING GUIDE	46	B800S00070935	SET SCREW (M4×8L)
22	B800S00080222	INTERNAL GEAR	47	B800S00080247	O-RING (Ø13.8×Ø2)
23	B800S00070423	PLANET GEAR	48	B800S00070110	EXHAUST DIFFUSER
24	B800S00030124	PIN (Ø4×13.8L)	49	B800S00040309	SCREW (TS2.9)
25	B800S00070425	BUSHING	50	B800S00070427	REDUCTION SPINDLE
26	B800S00080326	WORK SPINDLE	51	B800S00070421	CENTER GEAR