


# Air Screw Driver ASD-840S



Model No.:

# Air Screw Driver ASD-840S

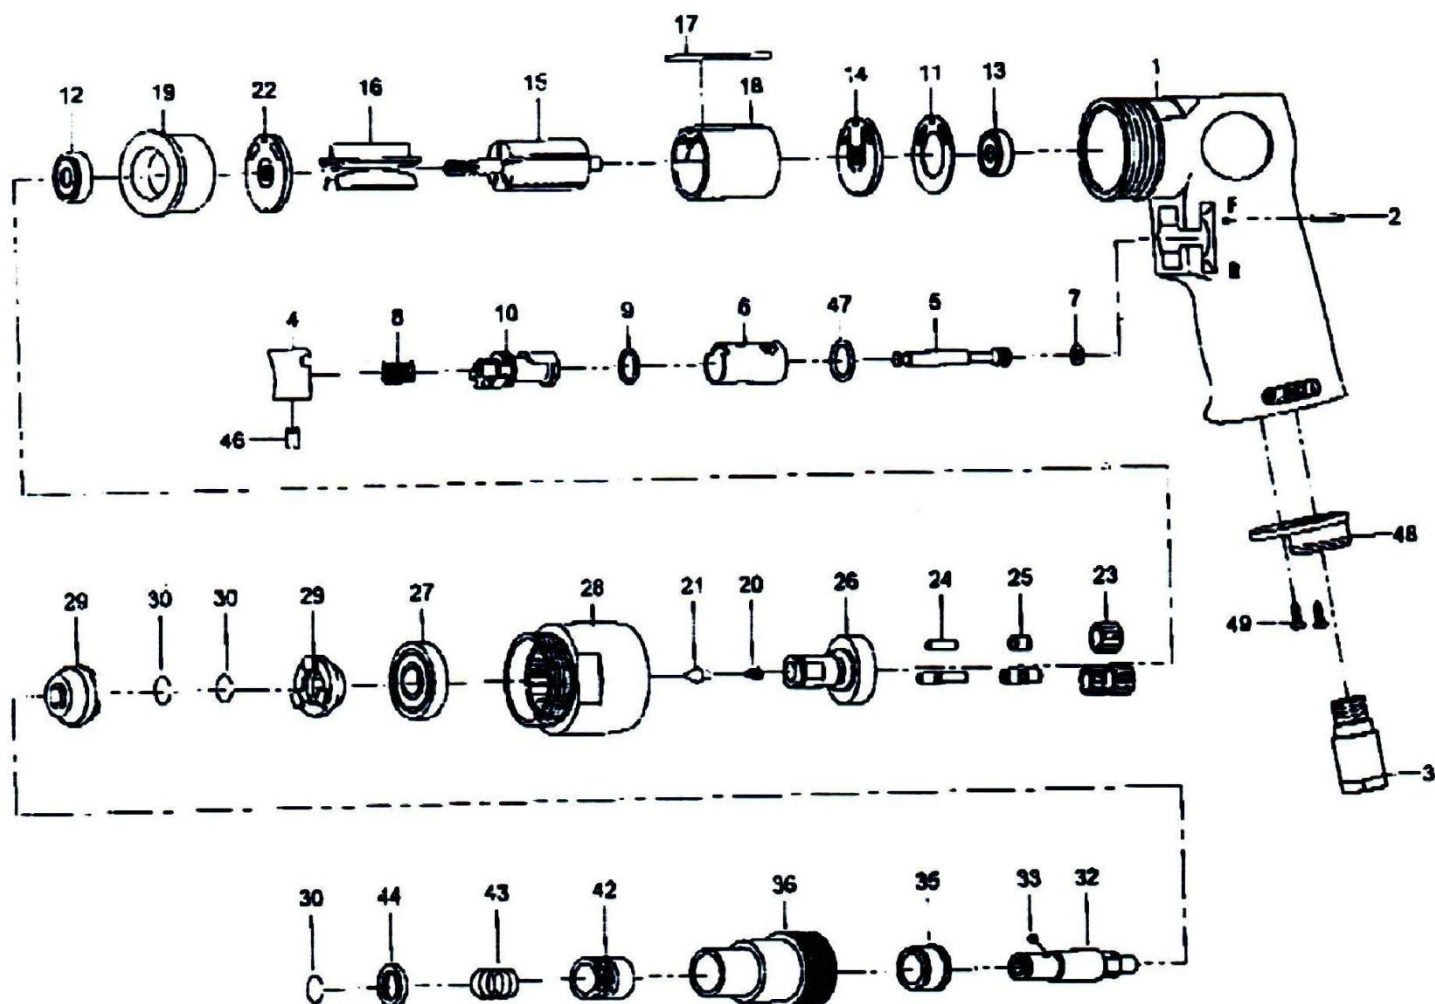

## MODEL ASD-840S Air Screw Driver

INDEX	PART NO.	DESCRIPTION	INDEX	PART NO.	DESCRIPTION
1	B840S00080201	HOUSING	22	B840S00080414	END PLATE
2	B840S00080202	SPRING PIN (Ø2.5×24L)	23	B840S00080223	PLANET GEAR
3	B840S00070103	AIR INLET	24	B840S00030124	PIN (4×13.8L)
4	B840S00070104	TRIGGER	25	B840S00080225	BUSHING
5	B840S00080205	VALVE STEM	26	B840S00080426	WORK SPINDLE
6	B840S00080206	REVERSE BUSHING	27	B840S00080227	BALL BEARING (6201Z)
7	B840S00070107	O-RING (Ø4.8×Ø1.9)	28	B840S00080428	CLAMP NUT
8	B840S00070108	VALVE SRPING	29	B840S00080429	DRIVE DOG
9	B840S00080209	O-RING (Ø12×Ø1.6)	30	B840S00080230	RETAINING RING
10	B840S00080210	REVERSE LEVER	32	B840S00080432	CAM SPINDLE
11	B840S00080211	MOTOR GASKET	33	B840S00040145	STEEL BALL (1/8")
12	B840S00030120	BALL BEARING (608ZZ)	35	B840S00080435	CLUTCH BUSHING
13	B840S00030113	BALL BEARING (626ZZ)	36	B840S00080436	CLUTCH HOUSING
14	B840S00080214	END PLATE	42	B840S00080242	BALL RETAINER
15	B840S00080415	ROTOR	43	B840S00080243	SPRING
16	B840S00080216	ROTOR BLADES	44	B840S00080244	WASHER
17	B840S00021713	SPRING PIN (Ø2.5×55L)	46	B840S00070935	SET SCREW (M4×8L)
18	B840S00021822	CYLINDER	47	B840S00080247	O-RING (13.8×2)
19	B840S00080419	FRONT END PLATE	48	B840S00070110	EXHAUST DIFFUSER
20	B840S00080220	SPRING	49	B840S00040309	SCREW (TS2.9)
21	B840S00080221	SPRING GUIDE			